


How to Disable Camera Audio


Method 1 (Anpviz HK series NVR or Hikvision NVR conneced)

Set on local NVR Menu or Web. Enter the NVR system Menu-Configuration-Record-Parameter
Change the channel camera Main and Sub-stream types to video stream, as shown in the figure

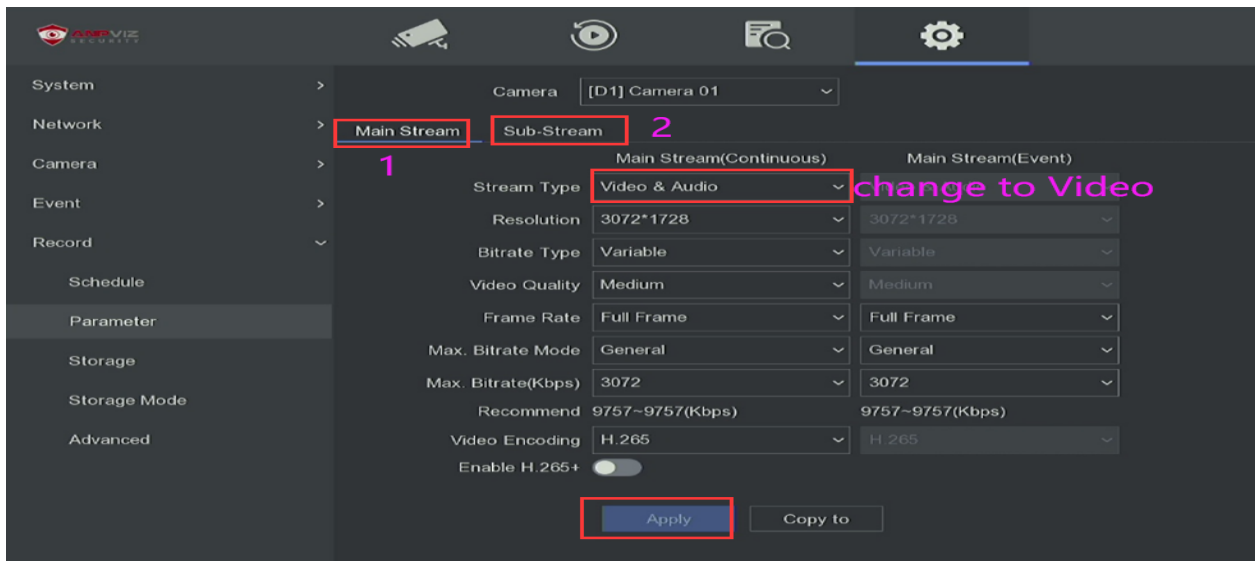

Method 2 (camera connected to a DC power or a PoE switch)

Enter the camera web page through a browser change to camera Main and Sub-stream types to video stream. Login to the camera web page, Configuration-Video/Audio, and change the Main and Sub-stream types to video stream, as shown in the figure:

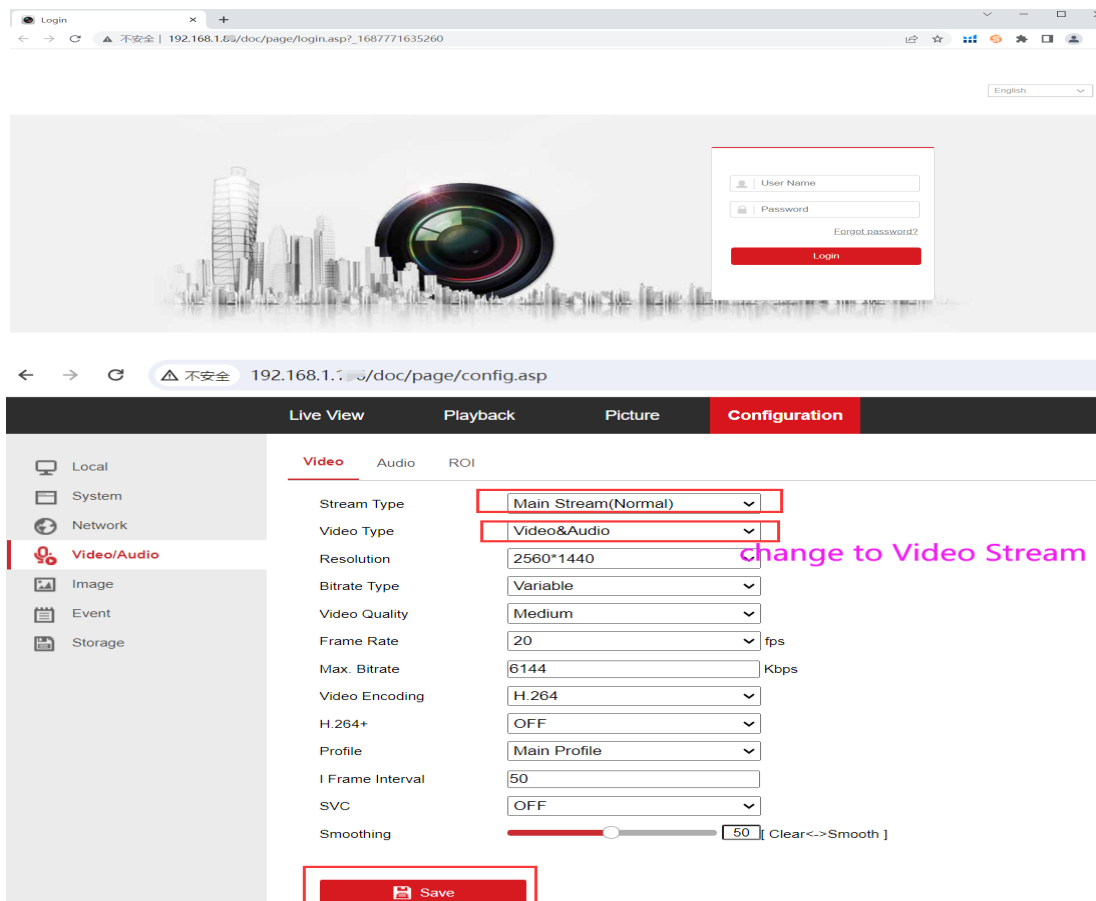

3. Disable or Enable all channel audio operations

Enter the NVR system Menu-Configuration-Camera-More Interface, enable camera microphone to disable, as shown in the figure

