



How to add 3rd party camera to Anpviz Network video Recorder

Note: This instruction teach you how to add 3rd party IP Poe cameras to Anpviz H Series NVR
(NVR108-8P; NVR216-16P; NVR7608Q1-8P; NVR7616Q2-16; NVR7632K4-16P; NVR7732-16P etc)

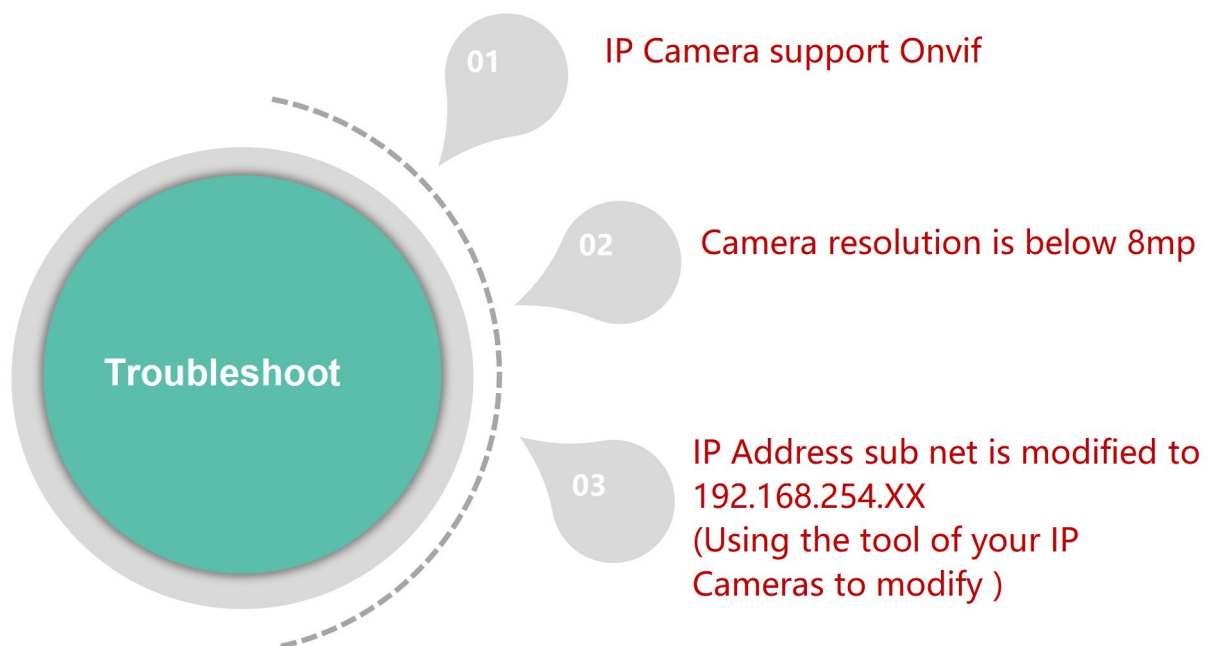

Step 1.

Connect your Network Cameras to network and power on first. Setup your Network Cameras with fixed IP address (192.168.254. XX)- Using the search tool of your cameras.

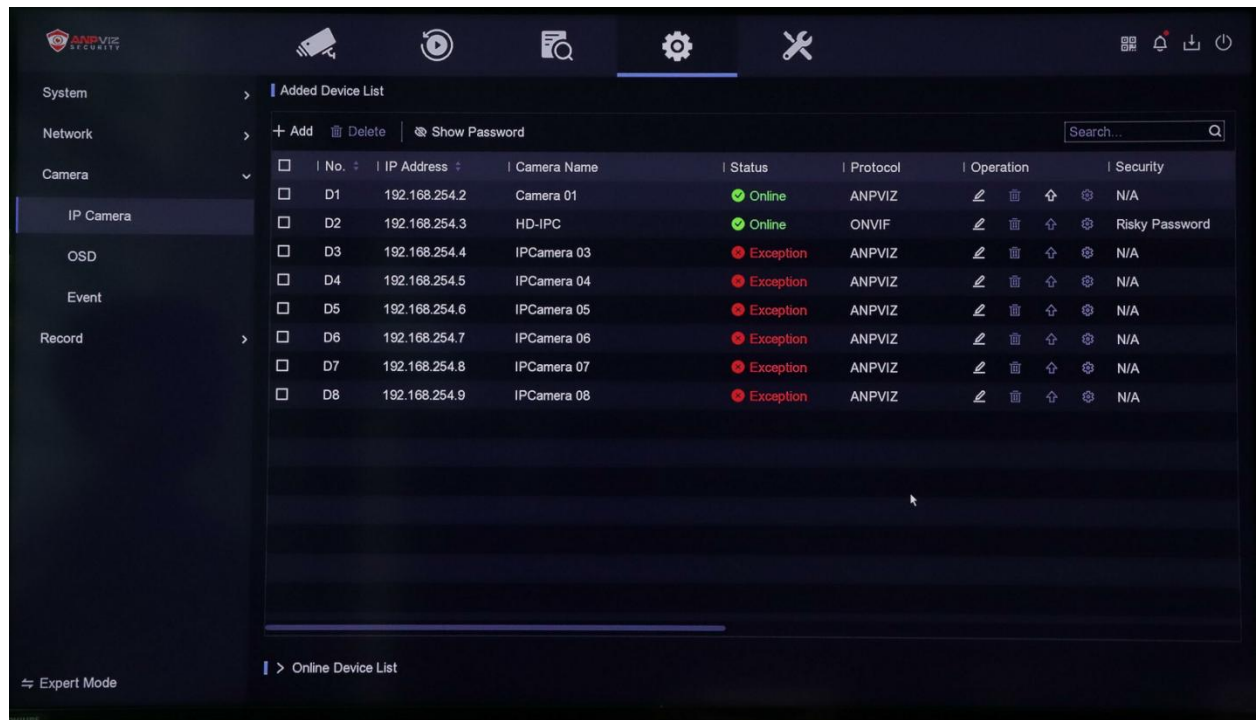

Step 2

Edit the camera channel

Adding method: Manual

Channel Address: fixed ip address of the camera, must be set to 192.168.254.xx

Protocol: Onvif

User name and password: Please use the cameras'



Note: If you still cannot connect to display the image, please provide the product brand, model or product link and abnormal prompt picture to support@anpvizsecurity.com for further support.