




How to set up and enable NVR system App alarm push notification

1. Log in to the Anpviz NVR system, then go to Menu-->Configuration-->Network-->Platform Access. Make sure the status is 'Online'.




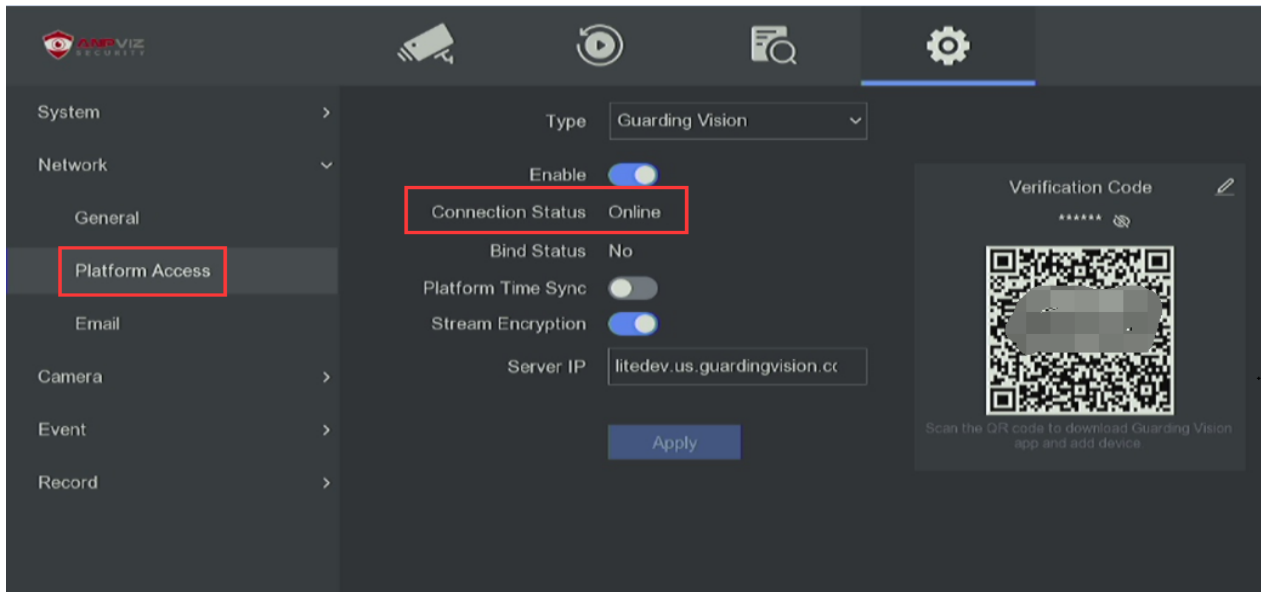


2. Download and install the [Guarding Vision/Hik-Connect](#) App and scan the QR code obtained after the NVR opens Platform Access and add it.

3. Check whether motion detection is enabled and set up (default is enabled)
Go to Menu-->Camera-->Motion to enable motion detection and Notify Surveillance Center.

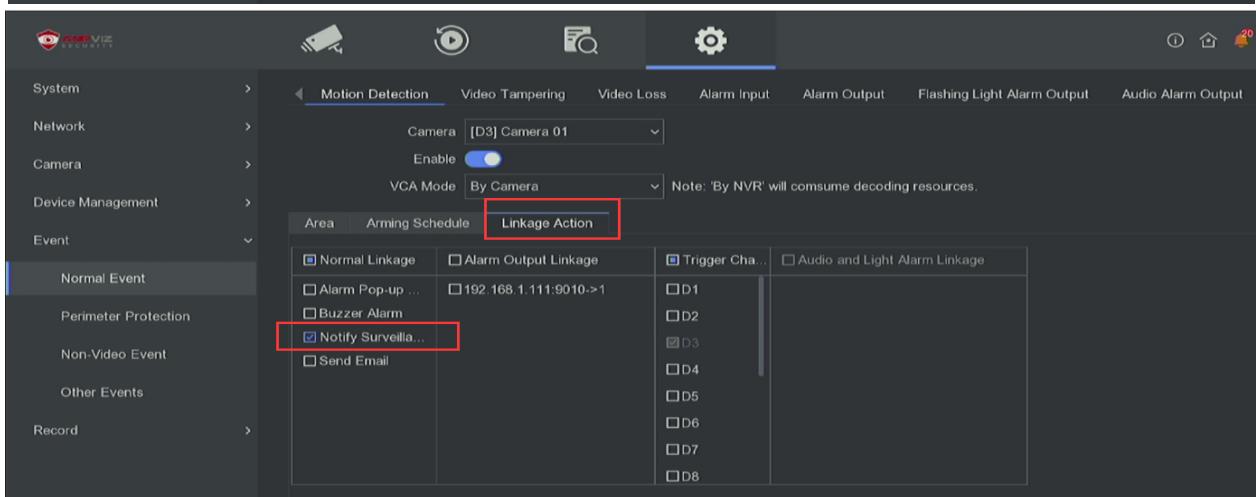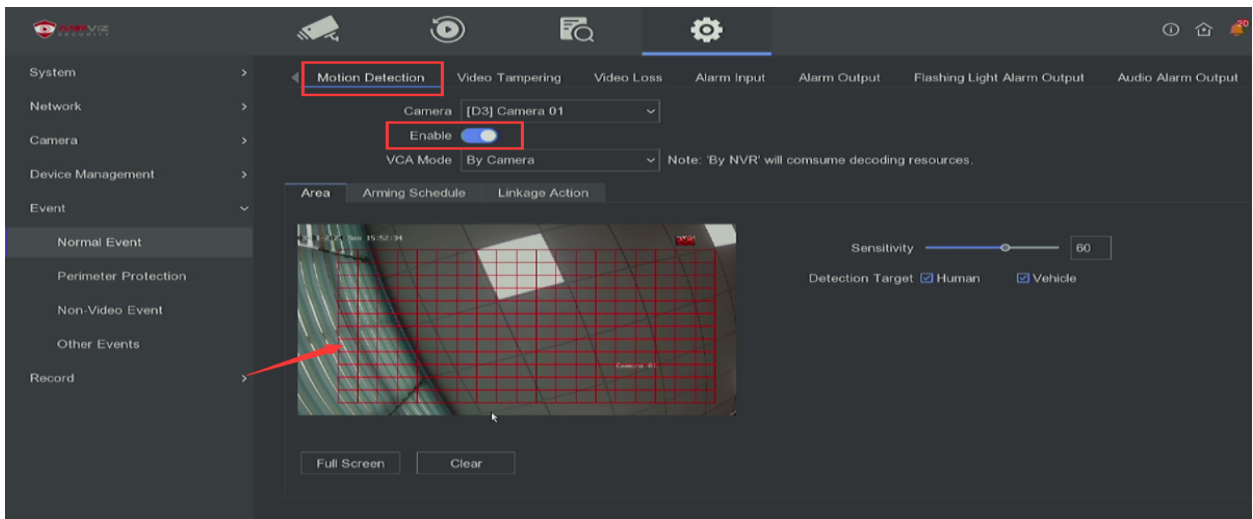

4.Enable the alarm push function on the app.
Go to the APP setting to Enable Push Notification:

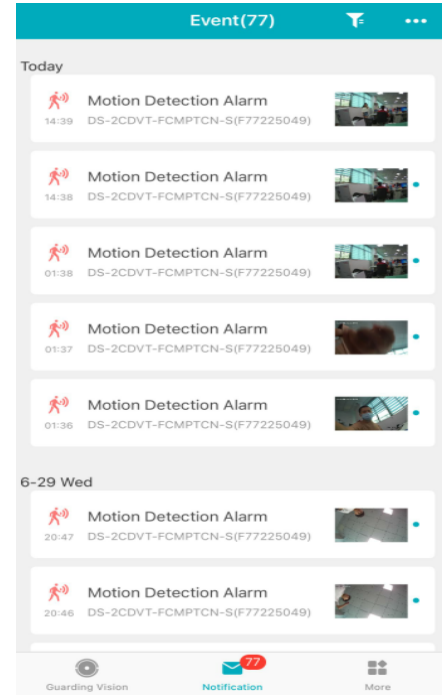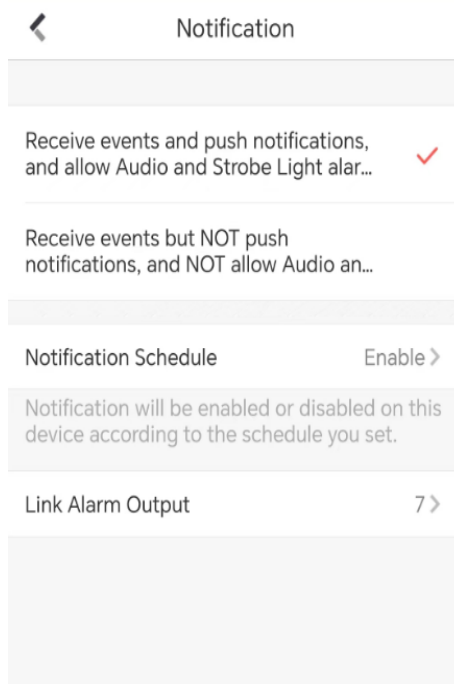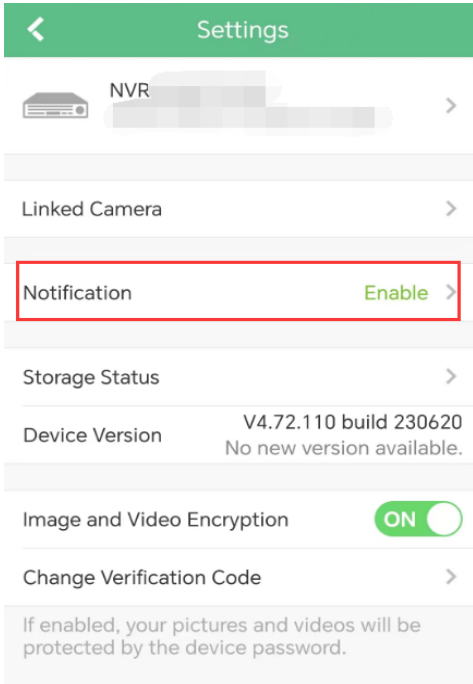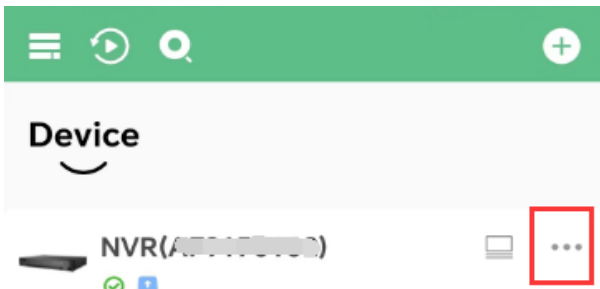

Note : If you cannot receive a push, please double-check to make sure your phone enabled notification for the app Guarding Vision or Hik-Connect.

